 


Part Name / Component

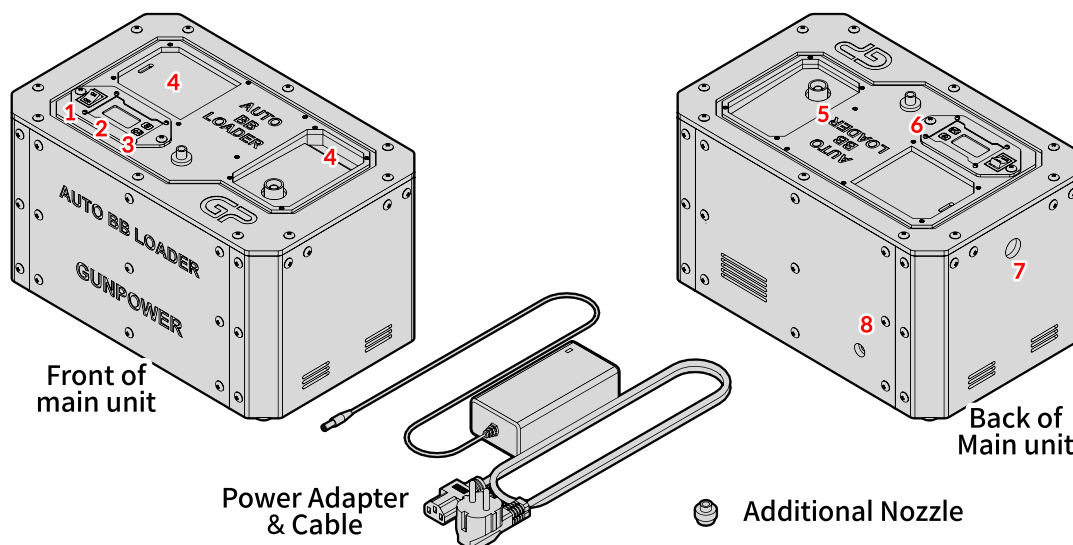

- | | | | |
|--------------------------|---------------------|-------------------|-------------------------|
| 1 Power switch | 2 Status LED | 3 Control buttons | 4 BB charging port |
| 5 Nozzle & Mounting hole | 6 BB injection port | 7 BB removal hole | 8 DC connector (12V 5A) |

※ Magazine adapter is not included.

Features of Auto BB Loader

- It is precisely manufactured using CNC machining.
- Utilizing a powerful motor, it can feed BBs into various magazines at high speed.
- Its high durability ensures long-term, trouble-free use.
- The simple structural design minimizes issues and allows for easy repair.
- With excellent counting performance, you can accurately inject the set quantity of BBs without error.
- Republic of Korea Patent Registration No. 10-1695173




Size	Weight	Input Power	Feeding Speed	Bullets Stored
313×195×186mm	3.1kg	DC 12V 5A External battery supported	Approx. 750/min under no-load	Maximum 5000


How to Use

1. Pressing the  button displays **"ADJUST"** and after 0.5 seconds, the currently set counter appears.
2. Pressing the  button again changes the setting value in 1-shot increments, while holding it down for about 1 second changes the setting value in 10-shot increments.
3. You can set the counter from 15 to 200 shots. If you continue pressing the  button, **"AUTO"** appears.
 - ※ **"AUTO"** ignores the set value and feeds the maximum amount of BBs. After setting the desired counter, press the  button; **"SAVE"** will be displayed, and the setting will be saved.
 - ※ If no further action is taken for approximately 2 seconds after setting the desired number of shots, the setting will not be saved, and **"CANCEL"** will be displayed.


BB Loading

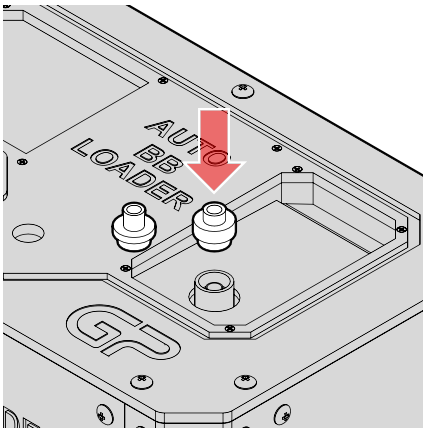

1. Attach the nozzle that fits the magazine to the injection port.

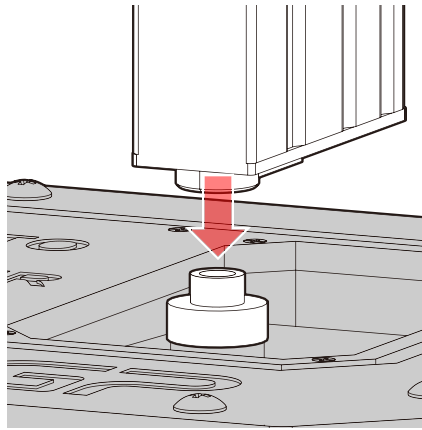


2. Insert the magazine into the nozzle.

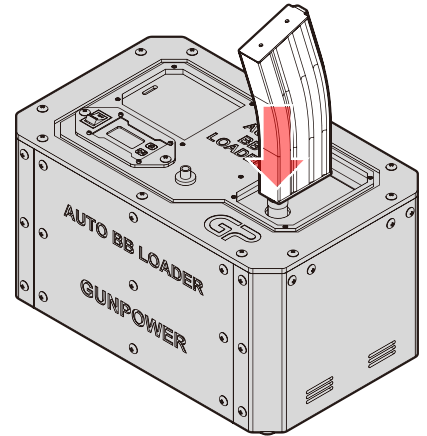


3. Press down to inject the BB.

BB Refill

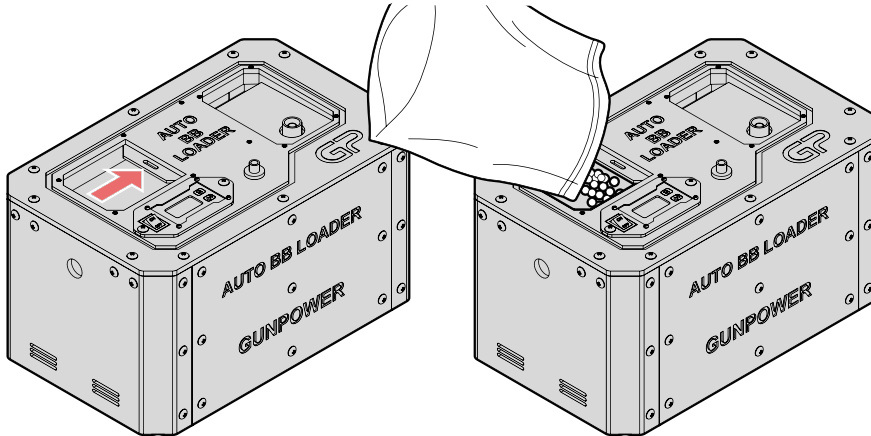

1. Slide the charging port cover to the side to open it.
2. Insert the BB through the charging port.

BB Remove

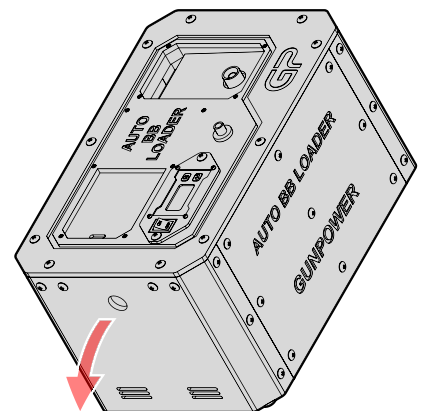

- Tilt it toward removal hole to eject the BBs.