 
 


COMPONENTS

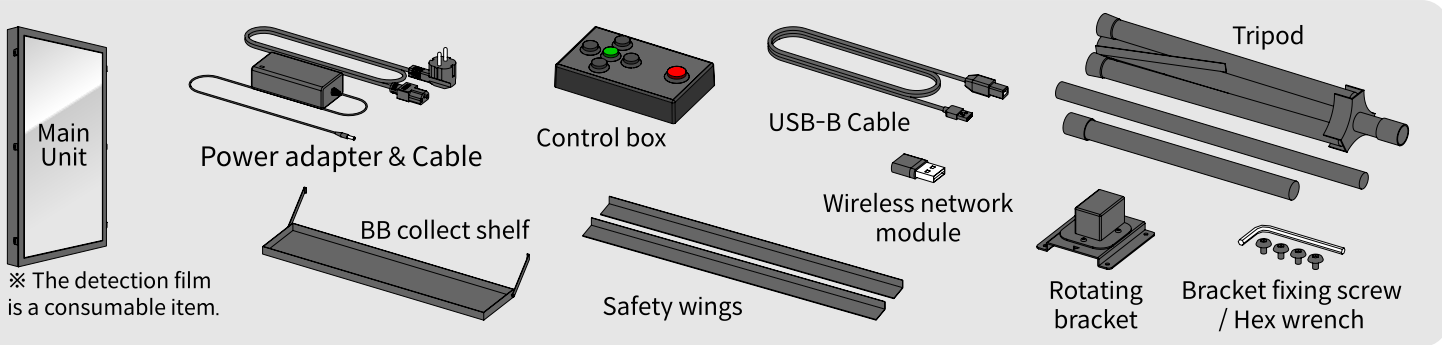

※ Refer to the illustration to install the product.

- 1 After installing the bracket to the main body, connect it to the tripod.
- 2 Connect the power adapter to the power terminal on the main unit.
- 3 Connect the power cable to an outlet.
- 4 Turn on the power switch next to the power terminal.

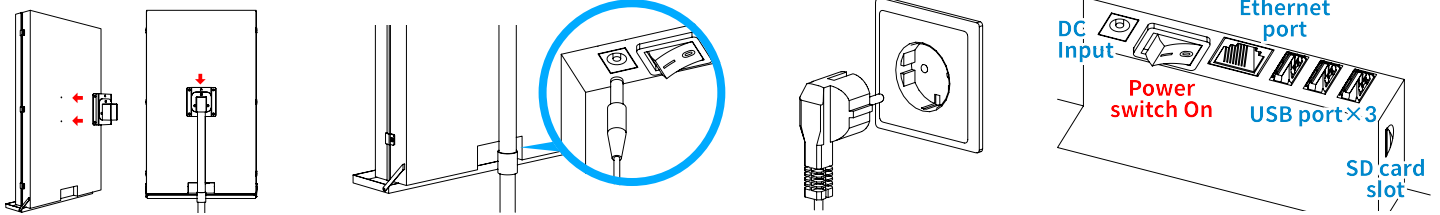 


CAUTION

- ✓ **0.2g**
400 fps
 - Use a bullet weight of 0.2 g / bullet velocity of 400 fps or less.
 - This product is intended for indoor use only. The recommended operating temperature is between 15°C and 30°C.
- ✓ **Use only the power cable provided.**
- ✗ **Automatic firing is prohibited.**
- ✗ **Please check if the detection film is torn prior to firing.** (Using the product with a torn detection film may damage the monitor, so please make sure replacing detection film.)
- ✗ **Do not fire anywhere but the detection film.** (The bullet may reflect and hit you when it is fired elsewhere other than the detection film.)
※ The detection film is a consumable product. (Recommended replacement cycle: after approximately 50,000 shots)
- ✗ **Do not use on floors that are tilted more than 5°.**

GUNPOWER Product User Guide SMT-N2 24" / 27" / 32"

- Colors and shapes may vary depending on the product, and specifications may change without notice to improve performance.
- The striking position may look different depending on the firing position and angle or viewing the screen.
- ※ Be careful of the impact during transport as it is vulnerable to impact.

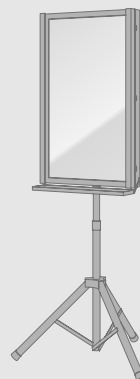

Install SMT Controller

 


[Play Store]




[App Store]


CAUTION

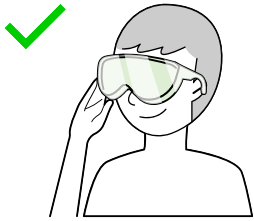

 
- Please wear safety goggles before firing.

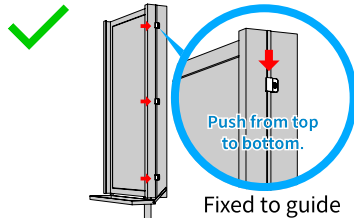

 
- Please attach safety wings to both sides of the product before shooting.

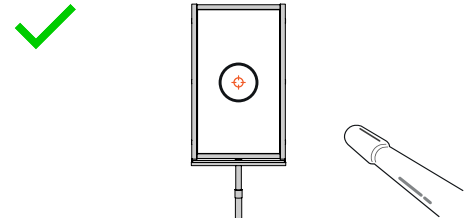

 - The muzzle must always be pointed at the target or forward, and the distance from the muzzle to the SMT must be at least 2 m.

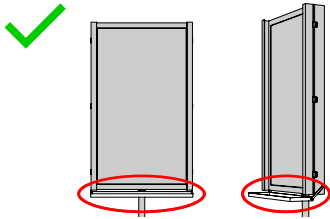

 - Unfold a B.B bullet plate on the product prior to firing. (The transparent panel on the shell catcher provides protection against BB pellets. Use with the shell catcher.)

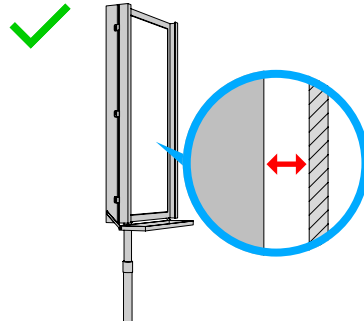


- Please check if the pre-fire detection film is attached to the monitor. (If it is attached to the monitor, it may cause damage to the monitor, so please remove it before use.)




If the sensor film and monitor are stuck together, use the suction tool shown in the picture to remove the attached surface before use.

 
※ Do not shoot when the detection film is removed.

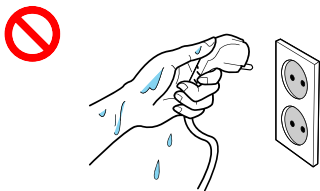

 
- Do not touch the power cable with wet hands.

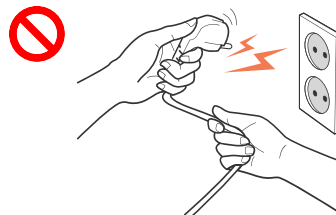

 - Do not bend or pull the power cable forcibly.

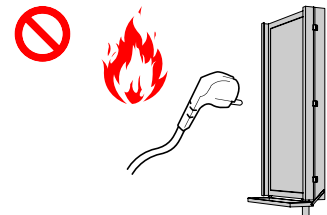

 
- Do not place the product near open flames or heat sources.

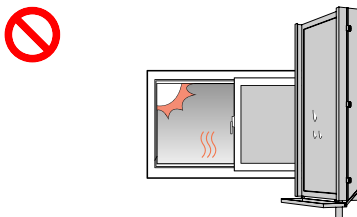

- Keep the product stored and installed out of direct sunlight.
- Do not store or use it for extended periods near an air conditioner or heater.



 - Do not turn the muzzle back or sideways while shooting.

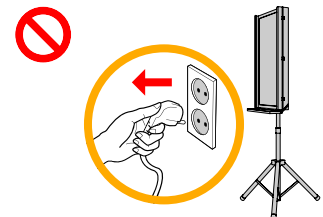

- Do not disconnect the power cable while using the product.

Product Specifications

Model Name	SMT24-N2 / SMT27-N2 / SMT32-N2
Screen Size(inch)	24 / 27 / 32 inch
Main Unit Size(cm) / Weight(kg)	24" 36.6×58×5.4cm / 6.5kg 27" 40.5×65×5.4cm / 8.3kg 32" 45.5×76×5.4cm / 9.4kg
Power Input	DC 12V 5A (60W)
Operating Temperature	10 to 33°C
Recommend Temperature	15 to 30°C
Optimal Humidity	50%



Model SMT-N2 Digital Target Display and Stand Unit (Size: 24/27/32inch)

Contact service@gunpower.com



✓ SMT Product Registration

Proceed on the GUNPOWER website

1. Sign up on the website(gunpower.com) and log in.
2. Open Product Registration in "My Account".
3. Enter the 8-digit serial number (located on the back of the device) and click "Save."

Proceed with SMT dedicated app

1. Search for "SMT Controller" in your smartphone app store and install it.
2. Sign up and log in to the app.
3. Connecting to SMT automatically registers your product.

※ Product registration is required to download free content and purchase paid content.
※ To connect the "SMT Controller" app and SMT, the included "Wireless Network Module" is required.

✓ How to Update SMT Software / Download Content (conducted at SMT)

SMT Internet Connection > Restart SMT > Accept update request upon startup

- If you have purchased content from the website, it will be automatically added to the update items.
- You can access your purchased content after the update. Please refer to the website announcement for detailed instructions.

✓ How to Troubleshoot SMT Problems

If the impact point is not displayed when shooting, or is displayed differently from the actual impact point

1. Run "Settings (⚙️)" at the top of the home screen.
2. Run "DEVICE CHECK > SENSOR CHECK".
3. Follow the on-screen instructions to perform a sensor check.
4. If the results indicate a sensor problem, please contact GUNPOWER.

If the content does not run or is not visible in the content list

1. Restart the device using the power switch.
2. If the same symptom occurs, go to "Settings".
3. From Settings, run "FACTORY RESET".
4. All software will be reset.
5. If the same issue persists after the reset, please contact GUNPOWER.

※ Most software-related issues can be resolved with a "FACTORY RESET".
Server-related or hardware issues may not be resolved with a "FACTORY RESET".
In such cases, please contact GUNPOWER and we will be happy to assist you.

If the screen does not appear when you turn on the device

SMT-N2


1. If the screen changes from "Red > Green > Blue" when you power it on and it won't boot, there may be a problem with the storage device or motherboard. Try replacing the system SD card. If you're having trouble doing this yourself, contact GUNPOWER.
2. If there's no response from the screen but you hear sound, there may be a display issue. Please contact GUNPOWER.

SMT55K

1. Try pressing the power button on the power button on the bottom back of the device.
2. If nothing happens, please contact GUNPOWER.

✓ How to Use a Wireless Network Module

 Installing USB Wireless Module

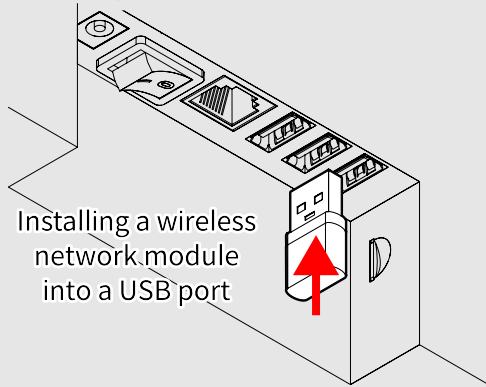

Network Settings

 
1. The provided module supports both Wi-Fi and Bluetooth.
2. After connecting the module, go to "Settings (⚙️) > Network Settings" and ensure Wi-Fi and Bluetooth are turned on.
3. Select the Wi-Fi network you want to connect to in "Network Settings > Wi-Fi Settings." In some cases, you may be asked to enter a password.

※ It may take some time to connect to Wi-Fi. Please wait.

※ Wireless networks are greatly affected by the surrounding environment, and depending on the situation, network connections may not be smooth.

※ For smooth use of SMT, a constant Internet connection is recommended.

✓ Network configuration for "Multi-Content" use


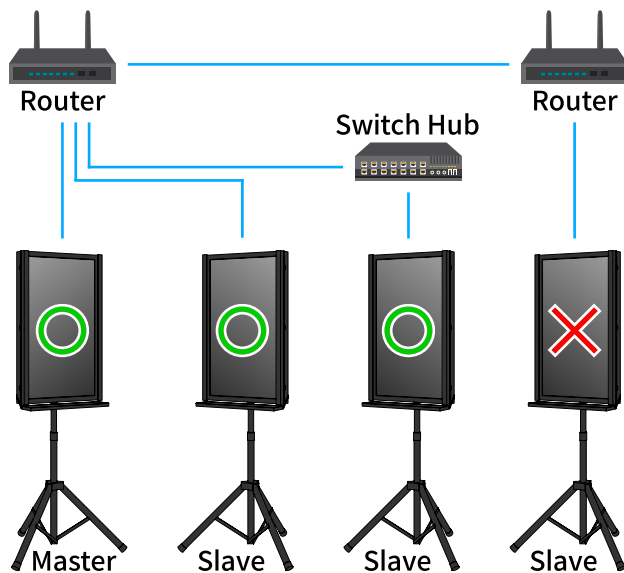


- **Multi-Content** works on a local network using the same router.
- **Multi-Content** recommends a wired network connection. Wireless connections may be unstable depending on the surrounding environment.




- Select the content marked "MULTI" from the content list.
- To play **Multi-Content**, you must designate one SMT as Master, and the others as Slaves. (Slave mode cannot be used independently.)

  ✓ How to Use the SMT Control Box

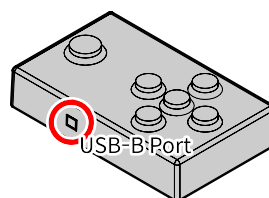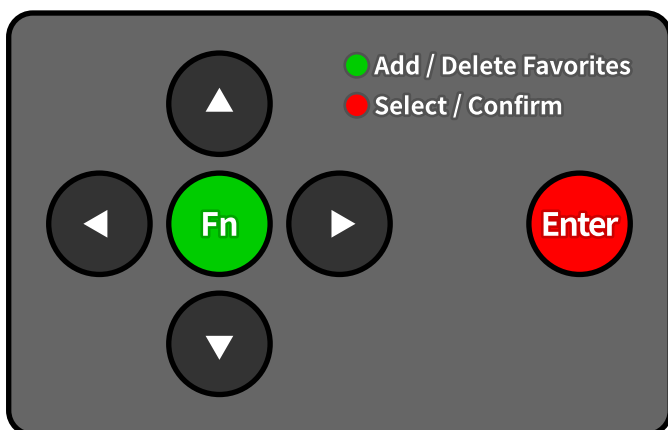

 Connect one end of the USB(A to B) cable to the Control Box and the other end to the SMT.

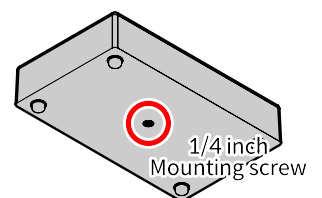

You can use a camera tripod as a stand.

Caution

- Do not handle the USB cable with wet hands.
- Do not bend or pull the USB cable excessively.
- Do not use on products other than SMT.
- Do not place the product near fire or heat sources.
- Store and install the product in a location away from direct sunlight.